


How to Measure for Plantation Shutters

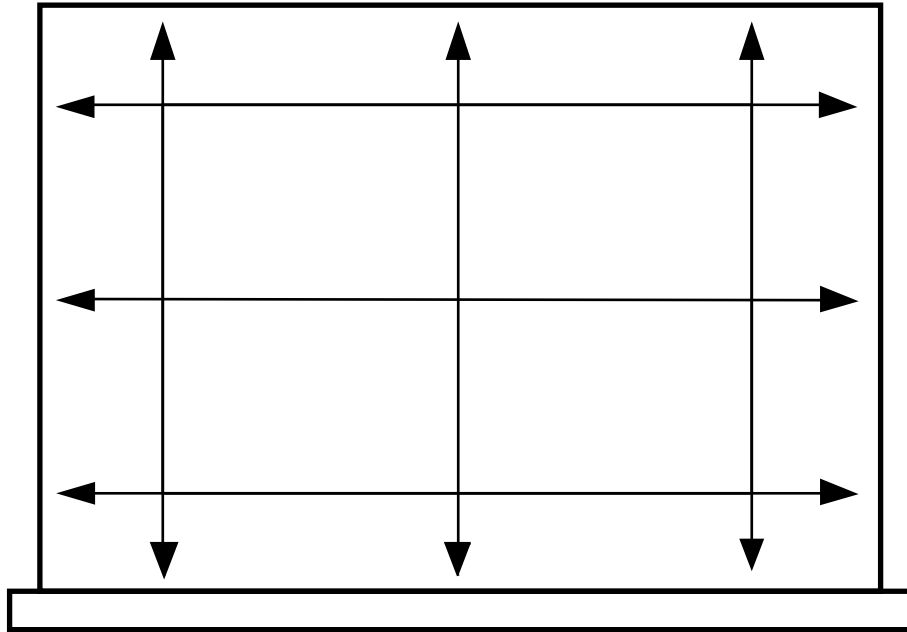

A. With a steel tape measure, measure width in 3 places (top, middle, bottom).

B. Measure the height in 3 places (left, center, right).

C. Measure depth-to first protrusion. Based on your choice of the most popular louver sizes, a depth of up to 3" is required for the front of your shutter panels to be flush with the wall surface AND the louvers to be fully operational.